

1

2

3

4

5

6

7

8

A

A


POSE
SE 10-8A7B1
出力内部回路図

B

B

C

C

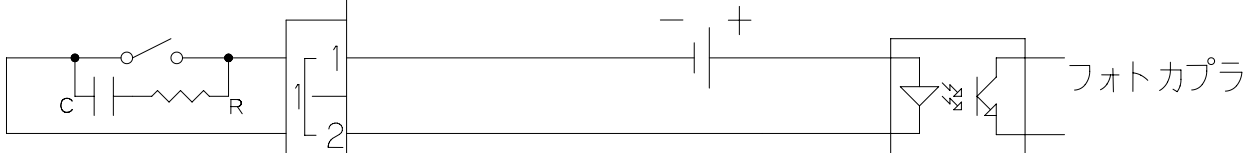

D

D



 
E

E




F

F




G

G

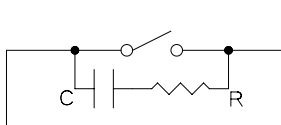


H

 H




I

 I



J

 J



K

K

L

L

※ B接点

出力接点接続図

POSE SE 10-8A7B1